# Certiq on Boomer 281, 282

All available information for the specified machine types



#### Operation

Utilization

Utilization hours (machine off/idle/working)

Utilization %

Engine hours

Drill hours

Drill oycle

Pump hours

Location

Site position

## Administration (admins only)

User settings

Machine settings

Organization settings

#### Maintenance

Diagnostic
Active alarms
No. of alarms
Alarm type trending (engine/hydraulics/others)
Alarm frequency (Count and time for each type)
Acknowledge alarm
Service
No. of machines in overdue status
No. of reported services
Predicted date for next service
Hours to next service

#### **Reports**

Report subscription	
report subscription	

Notification	
Mail notification	
SMS notification	

### Available alarms

Engine oil pressure low warning
Engine coolant temp high warning
Hydraulic oil level low warning
Transmission oil temp high alarm

(Some variations of supported alarms may exist due to model year and engine alternative)

SE-701 91 Örebro, Sweden Phone no: +46 (0)10 7550 000 Org no: 556077-9018

