Certiq on Minetruck MT431B, MT436B, MT436LP



All available information for the specified machine types

operation	Trainte Trainte C
Loading	Service
Material*	No. of machines in overdue status
Dump/load point*	No. of reported services
Utilization	Predicted date for next service
Utilization hours (machine off/idle/working)	Hours to next service
Utilization %	Diagnostic
Engine hours	Active alarms
Transmission hours	No. of alarms
Delay/status code*	Alarm type trending (engine/hydraulics/others)
Operator ID*	Alarm frequency (Count and time for each type)
Load cycle	Acknowledge alarm
Fuel consumption	Connectivity
Total liters	Last communication
Liter per hour	
Total CO ₂ emission	Reports
Location	Excel reports
Site position	
	Report subscription
Administration (admins only)	
User settings	Notification
	Mail notification
Machine settings	SMS notification
3	A . 11 . 1 . 1
Infrastructure	Available alarms
	Engine oil pressure low warning
Organization settings	Engine overspeed
<u> </u>	Engine coolant temp high warning
Machine communication	
	(Some variations of supported alarms may exist due to model year and engine alternative)

Maintenance

Operation

^{*}Available with Certiq onboard functionality

SE-701 91 Örebro, Sweden Phone no: +46 (0)10 7550 000 Org no: 556077-9018

