# Certiq on ROC L6, L7 TH, L7 CR, L8 (MKII Bosal)

All available information for the specified machine types



#### Operation

Drilling
Total drill meters
Drill meters per drill hour
Utilization
Utilization hours (machine off/idle/working)
Utilization %
Engine hours
Drill hours
Drill cycle
Delay/status code\*
Operator ID\*
Loading
Dump/Load point\*
Material\*
Location
GPS onboard (position Long/Lat)

#### Administration (admins only)

User settings

Machine settings

Organization settings

### Available alarms

Engine air filter clogged warning Hydraulic oil filter clogged warning Compressor air filter clogged warning

(Some variations of supported alarms may exist due to model year and engine alternative)

#### **Maintenance**

Predicted date for next service

Hours to next service

No. of machines in overdue status

No. of reported services

Diagnostic

Active alarms

No. of alarms

Alarm type trending (engine/hydraulics/others)

Alarm frequency (count and time for each type)

Acknowledge alarm

Connectivity

Last communication

## Reports

Excel reports

Report subscription

Notification

Mail notification

SMS notification

<sup>\*</sup>Available with Certiq onboard functionality

SE-701 91 Örebro, Sweden Phone no: +46 (0)10 7550 000 Org no: 556077-9018

