Certiq on Scooptram ST14 ARV

All available information for the specified machine types



Operation

Loading

Total tonnes

Tonnes per hour

Number of buckets

Tonnes per bucket

Total distance

Utilization

Worked hours

Motor hours Tramming hours

Idle hours

Average worked hours

Average tramming hours

Average idle hours

Utilization %

Fuel consumption

Total liters Liter per hour

Total CO₂ emission

Liters per tonnes

Location

Site position

Maintenance

Service

No. of machines in overdue status

No. of reported services

Predicted date for next service Hours to next service

Diagnostic

Active alarms No. of alarms

Alarm type trending (motor/hydraulics/others)

Alarm frequency (Count and time for each type)

Acknowledge alarm

Connectivity

Last communication

Reports

Excel reports

Report subscription

Notification

Mail notification

SMS notification

Administration (admins only)

User settings

Machine settings

Organization settings

Available alarms

Motor oil pressure low critical

Motor oil level low warning

Motor intake air filter clogged critical

Motor intake air temperature high critical

Motor oil temperature high

Motor overspeed warning

Motor overspeed

Motor coolant temp high critical

Motor coolant level low critical

Hydraulic oil temp high critical Hydraulic oil level low warning

Hydraulic oil level low critical

Hydraulic oil filter clogged warning

Hydraulic oil filter clogged critical

Transmission oil temperature high critical

Transmission oil pressure low critical Transmission oil level low warning

Transmission failure warning

Transmission filter blocked warning

Upbox oil filter blocked warning

Upbox oil temperature high warning

Upbox lubrication oil flow low warning

Lubrication failure warning

Lubrication level low warning

Brake fluid temperature high critical

Brake fluid filter clogged warning

Brake fluid level low warning

Brake accumulator pressure low critical

Brake accumulator pressure low warning

Brake temperature high

Brake pressure high

Brake test needed warning

Brake test fail warning

DPF level 2 warning

DPF level 3 critical

Battery voltage low warning

(Some variations of supported alarms may exist due to model year and motor alternative)